

# Suspension Parts & Poly Bushings for NISSAN PATHFINDER 1997-2004 - R50

## Parts Application Diagrams


### Macpherson Strut

With Separate Control Arm



### Coil Spring Solid Axle

With Panhard Rod, Upper And Lower Trailing Arms

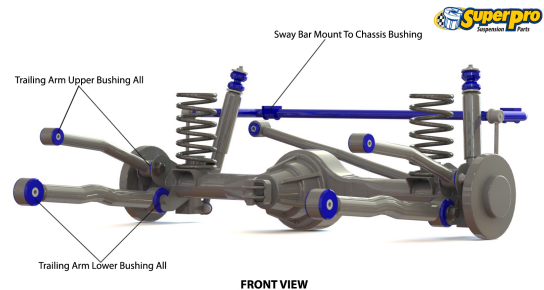

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	<a href="#">SPF4351-14K</a>	1	SuperPro SPF
Front	Control Arm Lower Front Bush Kit	<a href="#">SPF4671K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit	<a href="#">SPF2036K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Standard	<a href="#">SPF2037K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Single offset	<a href="#">SPF2038K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Double offset	<a href="#">SPF2039K</a>	1	SuperPro SPF
Front	Sway Bar Link Cut To Length Link	<a href="#">TRC4007</a>	2	Roll Control
Front	Sway Bar Link Kit - Heavy Duty Adjustable	<a href="#">TRC12105</a>	1	Roll Control
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1484-15K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1484-16K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1484-19K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1484-21K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1484-22K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1484-23K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1484-24K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1484-25K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1484-26K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1484-27K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1484-29K</a>	1	SuperPro SPF

Rear	Panhard Rod Bush Kit	<a href="#">SPF1248K</a>	1	SuperPro SPF
Rear	Sway Bar Link Upper Bush Kit	<a href="#">SPF2092B-4K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF1192-16K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF1192-18K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower Bush Kit	<a href="#">SPF0399K</a>	2	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit	<a href="#">SPF0399K</a>	2	SuperPro SPF